

HabasitLINK®

Sprocket series M1200



M = Modular belts

Belt pitch

S = sprocket one-piece; Z = split sprocket

Number of teeth

Shaft size

Shaft type: Q = square shaft; R = round shaft

Material: 6 = POM; 8 = PA

M 12 S 12 40 Q 6

Sprocket availability

Type	Number of teeth	Diam. of pitch Ø d _p		A ₁		Hub width B _L		Square bore Q		Ø Round bore R		Standard material
		mm	tommer	mm	tommer	mm	tommer	mm	tommer	mm	tommer	-
S	10	41.2	1.6	16.8	0.66	30	1.18			20	3/4	POM
S	15	62.4	2.5	27.6	1.09	30	1.18	25	1	25	1	POM
S	19	78.8	3.1	35.9	1.41	25	0.98		1.5		1	POM
S	24	99.2	3.9	46.4	1.83	30	1.18	25 / 40	1.5	25	1	POM
S	28	116.5	4.6	55.2	2.17	30	1.18	40	1.5	25		POM
S	36	149.8	5.9	72.2	2.84	30	1.18	40 / 60	1.5 / 2.5			POM
Z	24	99.2	3.9	46.4	1.83	40	1.57	40				POM
Z-H	28	116.5	4.6	55.2	2.17	51	2	40	1.5		1 3/16	PA+GS
Z-H	36	149.8	5.9	72.2	2.84	51	2	40 / 60	1.5 / 2.5	50	1	PA+GS

S, Z: molded sprockets; Z-H: Multi-Hub sprockets. Other sprocket and hub sizes on request.

Key ways for round bore shape follow European standards for metric sizes and US standards for imperial sizes. For detailed dimensions see table in the Engineering Guide chapter Design Guide.

Other materials available on request.




Sprocket one-piece ("open window")




Split sprocket

Sprocket arrangement

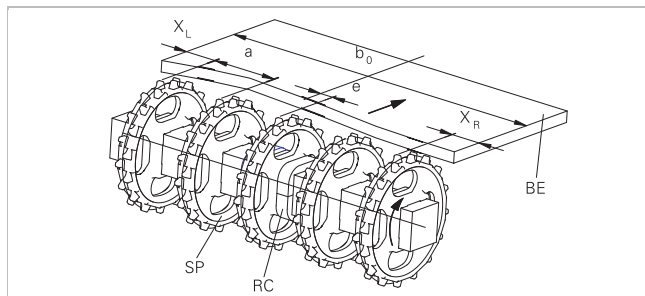

BE Belt
RC Retainer
SP Sprocket
b₀ belt width

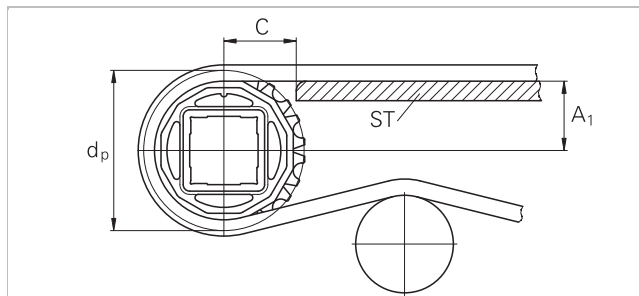

The distance **C** between the sprocket axis and the slider support **ST** is minimal 14 mm (0.55").

Wearstrips


Between driving shaft and idling sprockets or rollers the belt is carried by a slider support furnished with longitudinal wearstrips (ST) from UHMW Polyethylene or other suitable material.

Sprocket positioning

For correct positioning of the center sprocket divide the belt width by the link increment. The rounded result will be an even or an odd number. These numbers are the criteria for offset or no offset, see table.

Belt type	Sprocket spacing a		Sprocket edge distance (minimal)		Criteria for center sprocket position	Result of formula (rounded)	Offset e	Remarks
	minimal	maximal	X _L	X _R				
	mm inch	mm inch	mm inch	mm inch	mm inch		mm inch	Offset to which side
M1185*	50.8 2	101.6 4	50.8 2	50.8 2	n.a.	n.a.	0 0	in running direction A only
M1200	50 2	100 4	25 1	25 1	n.a.	n.a.	0 0	no offset for all belt widths

* For POM and PA belts a maximal admissible load 70% is recommended.

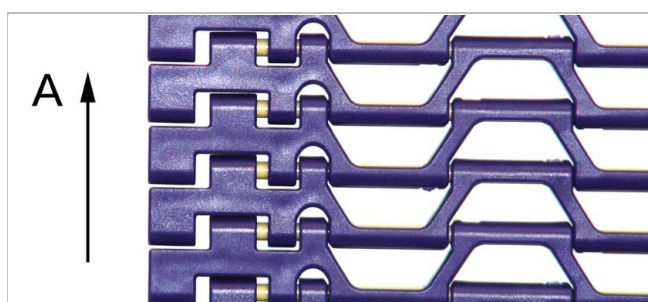

M1200 sprocket series are applicable with M1185 only in running direction (A).

Numbers of sprockets and wearstrips for series M1200

Standard belt width (nominal)		Number of sprockets per shaft	Number of wearstrips	
mm	<i>inch</i>	min. number	Carryway (top)	Returnway (bottom)
150	6	2	2	2
200	8	2	2	2
250	10	3	3	2
300	12	3	3	2
350	14	3	4	3
400	16	3	4	3
450	18	5	5	3
500	20	5	5	3
550	22	5	6	4
600	24	5	6	4
700	28	7	7	4
800	32	7	7	4
900	36	9	8	5
1000	40	9	8	5
1100	43	11	9	5
1200	47	11	9	5
1300	51	13	10	6
1400	55	13	10	6
1600	63	15	11	6
1800	71	17	12	7
2000	79	19	13	7

The number of sprockets depends on the belt load and may be different for driving and idling shafts.
For calculation of correct sprocket number please use LINK-SeleCalc.

Numbers of sprockets and wearstrips for M1185

Standard belt width (nominal)		Number of sprockets per shaft		Number of wearstrips	
mm	inch	min. number		Carryway (top)	Returnway (bottom)
203	8	2		3	2
254	10	2		3	2
305	12	2		3	2
356	14	3		4	3
406	16	3		4	3
457	18	3		4	3
508	20	5		5	3
559	22	5		5	3
610	24	5		5	3
660	26	5		6	4
711	28	7		6	4
762	30	7		6	4
813	32	7		7	4
864	34	9		7	4
914	36	9		7	4
965	38	9		8	5
1'016	40	9		8	5
1'067	42	11		8	5
1'118	44	11		9	5
1'168	46	11		9	5
1'219	48	11		9	5
1'270	50	13		10	6
1'321	52	13		10	6
1'372	54	13		10	6
1'422	56	15		11	6
1'473	58	15		11	6
1'524	60	15		11	6
1'575	62	15		12	7
1'626	64	17		12	7

The number of sprockets depends on the belt load and may be different for driving and idling shafts.
For calculation of correct sprocket number please use LINK-SeleCalc.

Numbers of sprockets and wearstrips for M1220 ActivXchange 0.5"

Standard belt width (nominal)		Number of sprockets per shaft		Number of wearstrips	
mm	inch	Drive shaft (loaded shaft)	Idling shaft (unloaded shaft)	Carryway (top)	Returnway (bottom)
109.8	4.3	1	1	2	2

Numbers of sprockets and wearstrips for M1280 ActivXchange 0.5"

Standard belt width (nominal)		Number of sprockets per shaft		Number of wearstrips	
mm	inch	Drive shaft (loaded shaft)	Idling shaft (unloaded shaft)	Carryway (top)	Returnway (bottom)
152.2	6.0	2	1	2	2

The number of sprockets depends on the belt load and may be different for driving and idling shafts.
For calculation of correct sprocket number please use LINK-SeleCalc.

Ansvarsfraskrivelse

Ansvarsfraskrivelse for produktanvendelse (gælder for ALLE Habasit produkter og nævnt på alle produktdatablade)

Denne ansvarsfraskrivelse gælder for Habasit og firmaer, som er tilknyttet os, samt vores chefer, ansatte, agenter og entreprenører (herefter fælles benævnt HABASIT) for de produkter som omfattes af denne tekst (herefter benævnt produkter). SIKKERHEDSADVARSLER SKAL LÆSES OMHYGGELIGT OG ALLE ANBEFALEDE SIKKERHEDSFORSKRIFTER SKAL FØLGES STRENGT! Følg advarslerne som findes i dette dokument, i Habasits kataloger og i installationsanvisninger og håndbøger. Alle indikationer og al information om applicering, anvendelse og ydelse af produktet er anbefalinger, som kan anses for værende pålidelige, men de er ingen fremstilling, garanti eller ansvarsforpligtigelse med hensyn til fuldstændighed, tolerancer eller egnethed til et bestemt formål. Denne information bygger på laboratoriearbejde med mindre testudstyr, kørt ved normaldrift, hvilket indebærer at den ikke nødvendigvis matcher produkttydelsen ved industriel anvendelse. Ny viden og erfaring kan medføre modificeringer og ændringer inden for en kort periode og uden forudgående varsel.

DISSE PRODUKTER OMFATTES AF HABASITS UDTRYKTE GARANTI, SOM ER DEN ENESTE GÆLDENDE GARANTI OG ERSTATTER ALLE ANDRE EVENTUELLE GARANTIER, UDTRYKTE ELLER UNDERFORSTÅEDE. HABASIT FRASKRIVER SIG ALT ANSVAR FOR ALLE ANDRE GARANTIER, UDTRYKTE ELLER UNDERFORSTÅEDE, INKLUSIVE, DOG UDEN AT BEGRÆNSES DERTIL, UNDERFORSTÅEDE GARANTIER OM SALGBARHED, EGNETHED TIL ET BESTEMT FORMÅL, AT PRODUKTERNE IKKE STRIDER MOD NOGLE REGLER, SAMT GARANTIER SOM FØLGE AF AFTALE, ANVENDELSE ELLER HANDEL. DETTE FORBEHOLD GÆLDER I DEN UDSTRÆKNING SOM LOVEN TILLADER. DA FORUDSÆTNINGERNE FOR ANVENDELSE ER UDEN FOR HABASITS KONTROL, KAN VI IKKE TAGE NOGET ANSVAR FOR DE NÆVNTE PRODUKTERS EGNETHED ELLER PROCESTILPASNING. DETTE FORBEHOLD GÆLDER OGSÅ FOR INDIKATIONER FRA PROCESRESULTATER OG OUTPUT.