



# HabasitLINK®

## Installation instructions for belt types F52 and F53 (both with old rod retaining system)

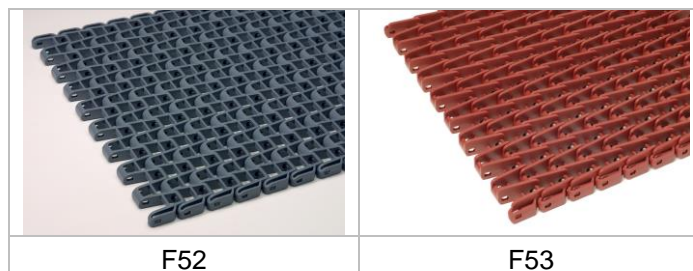


**⚠ CAUTION: Acetal belts will burn with a flame that is nearly invisible**

Preferred running direction and position of sprockets:

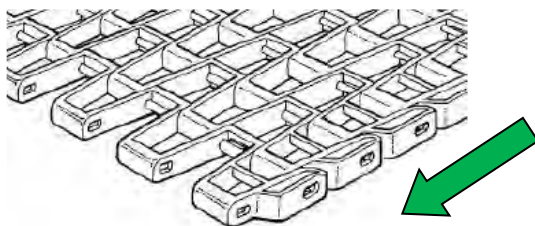

Belts are unidirectional

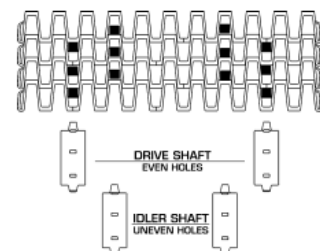

Maximum distance between sprockets is 6" (152mm)

