

CD = Cleandrive

Belt pitch

W = self-tracking sprocket; D = drive sprocket; T = tail pulley; P = support pulley

Number of teeth

Shaft size

Shaft type: Q = square shaft; R = round shaft

Material: 6 = POM (standard)

CD 40 P 10 40 Q 6

Sprocket availability


Type	Diam. of pitch Ø d _p		A ₁		Hub width B _L		Square bore Q		Standard material
	mm	inch	mm	inch	mm	inch	mm	inch	-
TC3	203.21	8.0	93	3.66142	160	6.3	40	1.5	POM
TC3	152.41	6.0	67.6	2.66142	160	6.3	40	1.5	POM
TC3	127.01	5.0	54.9	2.16142	160	6.3	40	1.5	POM
TC3	101.6	4.0	42.2	1.66142	160	6.3	40	1.5	POM
TC3	76.4	3.0	29.5	1.16142	160	6.3	25	1	POM
P-C3	203.21	8.0	93	3.66142	100	3.93701	40	1.5	POM
P-C3	203.21	8.0	93	3.66142	50	1.9685	40	1.5	POM
P-C3	152.41	6.0	67.6	2.66142	100	3.93701	40	1.5	POM
P-C3	152.41	6.0	67.6	2.66142	50	1.9685	40	1.5	POM
P-C3	127.01	5.0	54.9	2.16142	100	3.93701	40	1.5	POM
P-C3	127.01	5.0	54.9	2.16142	50	1.9685	40	1.5	POM
P-C3	101.6	4.0	42.2	1.66142	100	3.93701	40	1.5	POM
P-C3	101.6	4.0	42.2	1.66142	50	1.9685	40	1.5	POM
P-C3	76.4	3.0	29.5	1.16142	100	3.93701	25	1	POM
P-C3	76.4	3.0	29.5	1.16142	50	1.9685	25	1	POM

*-C3: Machined sprockets


Other sprocket and hub sizes on request.

Key ways for round bore shape follow European standards for metric sizes and US standards for imperial sizes. For detailed dimensions see table in the Design Guide.

Other materials available on request.

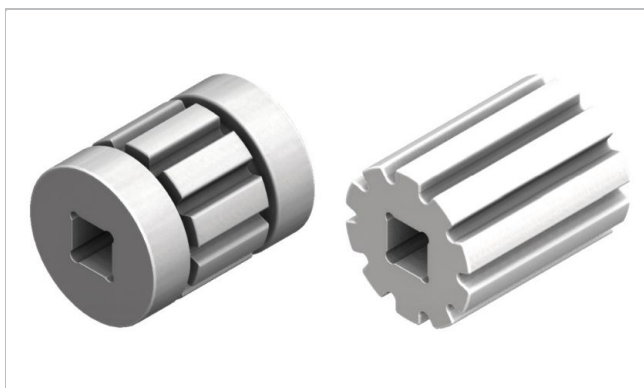


W = koło zebate z efektem prowadzenia (lewe); **D** = koło napędowe (prawe);

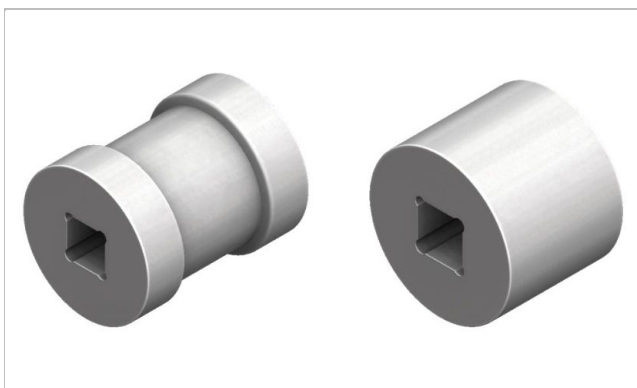

T=rolka zwrotna (lewa) oraz **P** = rolka podporowa (prawa)

Sprocket arrangement

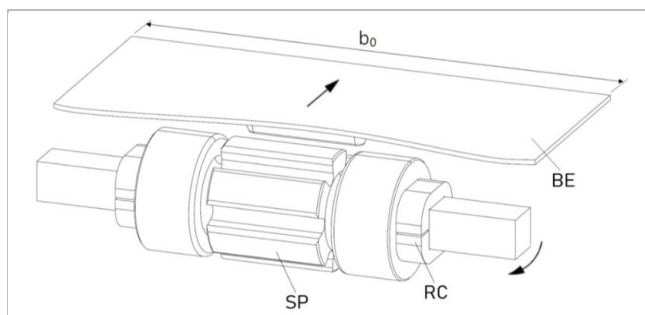


BE Belt
RC Retainer
SP Sprocket
b₀ belt width

Wearstrips

Between driving shaft and idling sprockets or rollers the belt is carried by a slider support furnished with longitudinal wear strips from UHMW Polyethylene or other suitable material.

If the maximal load is concentrated in the middle of the belt we recommend supporting the lugs by an additional wear strip. This avoids localized belt deformation and excessive belt abrasion from wear strips adjacent to the lugs. It is always recommended to support the lug area on the return way.

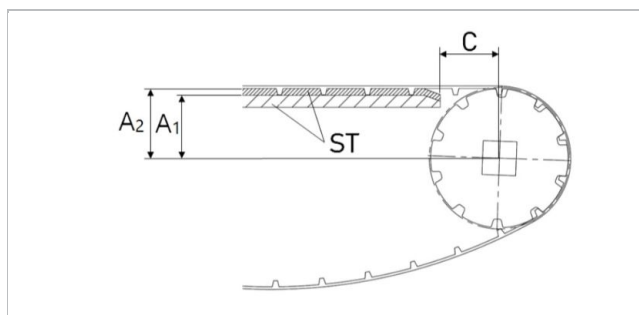

The distance **C** between the sprocket axis and the slider support **ST** is minimal 53 mm (2.1").

Number of sprockets and wearstrips

To ensure the right amount of belt support on the driving shaft, use minimum 70% of the belt width for sprockets and support rollers. For the idler shaft is just 50% of the total support length.

The table below shows the number of sprockets including distances for typical belt widths b_0 .
To calculate the adjusted belt tensile force contact your Habasit representative.

Belt width b_0 [mm] / [inch]	Number of lug rows and sprockets			Minimum number of wear strips	
				Carry way	Return way
150 / 6	1			2	2
200 / 8	1			4	2
250 / 10	1			4	2
300 / 12	1			4	2
350 / 14	1			4	2
400 / 16	1			4	2
450 / 18	1			4	2
500 / 20	1			4	3
550 / 22	1			6	3
609 / 24	1			6	3
650 / 26	1			6	4
700 / 28	1*	2		6	4
750 / 30	1*	2		6	4
800 / 32	1*	2		8	4
850 / 34	1*	2		8	5
900 / 36	1*	2		8	5
950 / 38	1*	2		9	5
1000 / 40	1*	2		9	5
1100 / 44	1*	2		11	6
1200 / 48		2		11	6
1300 / 52		2	3	12	6
1400 / 56		2	3	14	7
1500 / 60		2	3	14	7
1650 / 64		2	3	16	8
1750 / 68		2	3	18	8
1810 / 72		2	3	18	9

*possible just from the middle row

For belt widths greater than 685 mm (27"), use no fewer than two lug rows if the admissible tensile force utilized is above 50%.

To oświadczenie jest złożone przez i w imieniu firmy Habasit oraz jego oddziałów, dyrektorów, pracowników, agentów i kontrahentów (zwanych dalej "HABASIT") w odniesieniu do produktów, zwanych dalej ("Produkty").
OSTRZEŻENIA DOTYCZĄCE BEZPIECZEŃSTWA NALEŻY PRZECZYTAĆ DOKŁADNIE I ŚCISLE POSTĘPOWAĆ ZGODNIE Z ZALECANymi ŚRODKAMI OSTROŻNOŚCI! Proszę zapoznać się z ostrzeżeniami dotyczącymi bezpieczeństwa w katalogu Habasit, a także w instrukcji instalacji i obsługi. Wszystkie dane / informacje dotyczące stosowania, wykorzystywania i działania produktów mają charakter zaleceń przedstawionych z zachowaniem należytej staranności i troski, ale nie składa się żadnych oświadczeń ani zapewnień co do ich kompletności, dokładności lub przydatności do określonego celu. Dane podane w niniejszym dokumencie są oparte na badaniach laboratoryjnych wykonywanych na małą skalę, w standardowych warunkach i mogą być niezgodne z parametrami eksploatacji produktu w warunkach przemysłowych. Nowa wiedza i doświadczenie mogą doprowadzić do ponownej oceny i zmian w krótkim okresie czasu i bez wcześniejszego powiadomienia.
ZA WYJĄTKIEM WYRAŻNYCH GWARANCJI UDZIELONYCH PRZEZ HABASIT, KTÓRE SĄ WYŁĄCZNE I WYŁĄCZAJĄ INNE GWARANCJE, WYRAŻNE LUB DOROZUMIANE, PRODUKTY SĄ DOSTARCZANE W STANIE TAK, JAK JEST. HABASIT ZRĘKA SIĘ ODPOWIEDZIALNOŚCI Z TYTUŁU INNYCH GWARANCJI, WYRAŻNYCH I DOROZUMIANYCH, W TYM, LECZ NIE OGRANICZAJĄC SIĘ DO DÓMNIEMANYCH GWARANCJI PRZYDATNOŚCI HANDLOWEJ LUB PRZYDATNOŚCI DO OKREŚLONEGO CELU, NIENARUSZALNOŚCI, LUB WYNIKAJĄCE Z PRZEBIEGU TRANSAKCJI, UŻYTKOWANIA LUB PRAKTYKI HANDLOWEJ, Z KTÓRYCH WSZYSTKIE ZOSTAJĄ NINIEJSZYM WYŁĄCZONE W ZAKRESIE DOZWOLONYM PRZEZ OBOWIAZUJĄCE PRZEPISY. PONIEWAŻ WARUNKI UŻYTKOWANIA W ZASTOSOWANIACH PRZEMYSŁOWYCH SĄ NIEZALEŻNE OD FIRMY HABASIT, HABASIT NIE PONOSI ODPOWIEDZIALNOŚCI ZA PRZYDATNOŚĆ PRODUKTÓW DO STOSOWANIA W OKREŚLONYCH PROCESACH, W TYM ZA WYNIKI PROCESU I WYDAJNOŚĆ.