

HabasitLINK®
Sprocket series M2500



M = 模组网带

节距

S = 一体式链轮; Z = 分体式链轮

齿数

轴尺寸

轴类型: Q = 方轴; R =圆轴

材料: 6 = POM; 8 = PA

M

25

S

12

40

Q

6


Sprocket availability

类型	齿数	节圆直径 Ø d _p		A ₁		孔宽度 B _L		方孔 Q		Ø Round bore R		标准材质
		mm	英寸	mm	英寸	mm	英寸	mm	英寸	mm	英寸	
S	7	59.4	2.3	25.5	1	20	0.79	25	1			POM
S	8	66.7	2.6	29.3	1.15	30	1.18	25		30	1	POM
S	10	82.5	3.3	37.3	1.47	30	1.18	40	1 / 1.5	30	1	POM
S	12	98.6	3.9	45.4	1.79	30	1.18	40	1 / 1.5	30 / 40	1	POM
S	15	122.7	4.8	57.8	2.28	30	1.18	60				POM
S	16	130.8	5.2	61.9	2.44	30	1.18	40	1.5	30		POM
S	18	146.9	5.8	70.1	2.76	30	1.18	40 / 60	1.5	30	1 / 1¼	POM
S	20	163	6.4	78.3	3.08	30	1.18	40 / 60	1.5	30	1	POM
Z	12	98.6	3.9	45.4	1.79	40	1.57	40	1.5			POM
Z	18	146.9	5.8	70.1	2.76	47	1.85	40 / 60				POM
Z	20	163	6.4	78.3	3.08	40	1.57	40				POM

S, Z: 注塑链轮. 其他链轮和宽度应要求。
键槽对圆孔尺寸遵循欧洲公制标准参数以及美国英制标准参数。细节尺寸请看《设计指南》的表格。
其他材料应要求可供。




Sprocket one-piece ("open window")

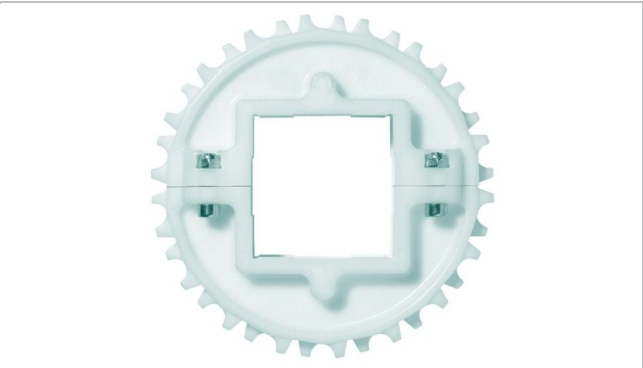


Split sprocket

Sprocket arrangement

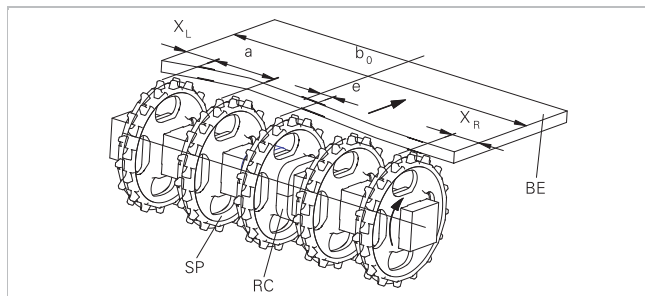

是皮带
RC 保持器
SP 链轮
b₀ 皮带宽度

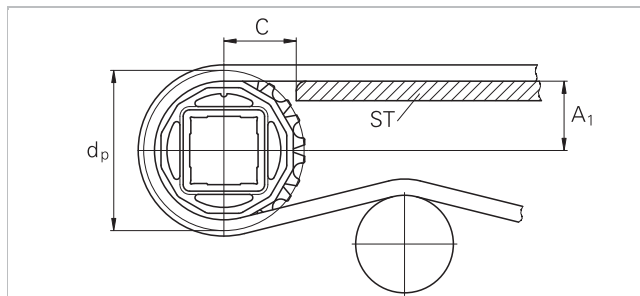

The distance **C** between the sprocket axis and the slider support **ST** is minimal 28 mm (1.1").

Wearstrips


Between driving shaft and idling sprockets or rollers the belt is carried by a slider support furnished with longitudinal wearstrips (ST) from UHMW Polyethylene or other suitable material.

Sprocket positioning


For correct positioning of the center sprocket divide the belt width by the link increment. The rounded result will be even or an odd number. These numbers are the criteria for offset or no offset, see table:

Belt type	Sprocket spacing a		Sprocket edge distance (minimal) *		Criteria for center sprocket position	Result of formula (rounded)	Offset e	Remarks
	minimal mm inch	maximal mm inch	X _L mm inch	X _R mm inch				
Series M2500 except M2540/44 except M2585/86	50 2	100 4	25 1	25 1	$b_0 / 16.66$ $b_0 / 0.66$	even number (2, 4, 6 ...)	8.3 0.33	right or left side
						odd number (3, 5, 7 ...)	0 0	no offset
M2540	50 2	117 4.6	21 0.8	29 1.15	$b_0 / 16.66$ $b_0 / 0.66$	even number (2, 4, 6 ...)	4.2 0.17	right in running direction A left in running direction B
						odd number (3, 5, 7 ...)	4.2 0.17	left in running direction A right in running direction B
M2540 with hold down tabs	50 2	117 4.6	54 2.13	62 2.44	$b_0 / 16.66$ $b_0 / 0.66$	even number (2, 4, 6 ...)	4.2 0.17	right in running direction A left in running direction B
						odd number (3, 5, 7 ...)	4.2 0.17	left in running direction A right in running direction B
M2540 MTW mold to width and bricklaid	50 2	117 4.6	41 1.6	49 1.93	$b_0 / 16.66$ $b_0 / 0.66$	even number (2, 4, 6 ...)	4.2 0.17	right in running direction A left in running direction B
						odd number (3, 5, 7 ...)	4.2 0.17	left in running direction A right in running direction B
M2544	50 2	117 4.6	33 1.3	42 1.65	$b_0 / 16.66$ $b_0 / 0.66$	even number (2, 4, 6 ...)	4.2 0.17	right in running direction A left in running direction B
						odd number (3, 5, 7 ...)	4.2 0.17	left in running direction A right in running direction B
M2585-P0 M2586	67 2.66	135 5.3	42 1.65	59 2.32	$b_0 / 33.8$ $b_0 / 1.33$	even number (2, 4, 6 ...)	8.3 0.33	right in running direction A left in running direction B
						odd number (3, 5, 7 ...)	8.3 0.33	left in running direction A right in running direction B
M2585-S0	67 2.66	135 5.3	76 3	59 2.32	$b_0 / 33.8$ $b_0 / 1.33$	even number (2, 4, 6 ...)	8.3 0.33	right in running direction A left in running direction B
						odd number (3, 5, 7 ...)	8.3 0.33	left in running direction A right in running direction B


* X_L and X_R are related to the running direction A and inverse for running direction B.

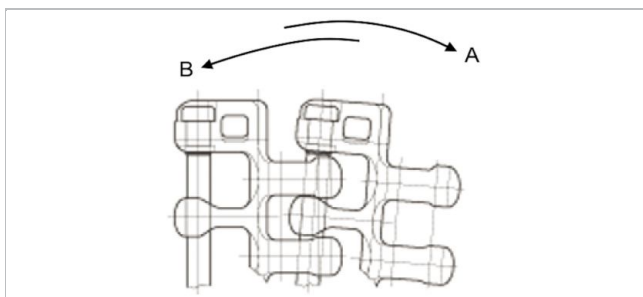

M2540, left edge X_L

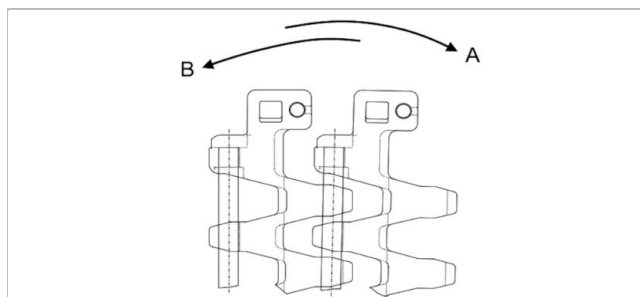

M2544, left edge X_L

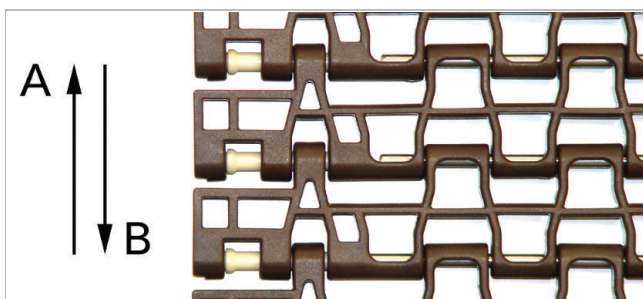

M2585-S0, left edge X_L (M2585-P0, M2586 similar)

Number of sprockets and wearstrips for straight running belts

(excluding M2585 / 86: see separate table)

Standard belt width (nominal)		Number of sprockets per shaft	Number of wearstrips	
mm	inch		Carryway (top)	Returnway (bottom)
150	6	2	2	2
200	8	2	2	2
250	10	3	3	2
300	12	3	3	2
350	14	3	4	3
400	16	3	4	3
450	18	5	4	3
500	20	5	5	3
550	22	5	5	3
600	24	5	5	3
700	28	7	6	4
800	32	7	7	4
900	36	9	7	4
1000	40	9	8	5
1100	43	11	8	5
1200	47	11	9	5
1300	51	13	10	6
1400	55	13	10	6
1600	63	15	11	6
1800	71	17	12	7
2000	79	19	13	7

The number of sprockets depends on the belt load and may be different for driving and idling shafts.
For calculation of correct sprocket number please use LINK-SeleCalc.

Number of sprockets and wearstrips for radius belts M2540, M2544

Standard belt width (nominal)		Number of sprockets per shaft	Number of wearstrips	
mm	<i>inch</i>	min. number	Carryway (top)	Returnway (bottom)
150	6	2	2	2
200	8	2	2	2
250	10	2	3	2
300	12	3	3	2
350	14	3	3	3
400	16	3	3	3
450	18	3	3	3
500	20	3	4	3
550	22	5	4	3
600	24	5	4	3
700	28	5	5	4
800	32	7	5	4
900	36	7	5	4
1000	40	9	6	5
1100	43	9	6	5
1200	47	9	7	5

The number of sprockets depends on the belt load and may be different for driving and idling shafts.
For calculation of correct sprocket number please use LINK-SeleCalc.

Number of sprockets and wearstrips for radius belts M2540 and M2544 with hold down tabs

Standard belt width (nominal)		Number of sprockets per shaft	Number of wearstrips	
mm	<i>inch</i>	min. number	Carryway (top)	Returnway (bottom)
150	6	1	2	2
200	8	2	2	2
250	10	2	3	2
300	12	2	3	2
350	14	3	3	3
400	16	3	3	3
450	18	3	3	3
500	20	3	4	3
550	22	3	4	3
600	24	5	4	3
700	28	5	5	4
800	32	5	5	4
900	36	7	5	4
1000	40	9	6	5
1100	43	9	6	5
1200	47	9	7	5

The number of sprockets depends on the belt load and may be different for driving and idling shafts.
For calculation of correct sprocket number please use LINK-SeleCalc.

Number of sprockets and wearstrips for radius belts M2540 Radius Flush Grid 1" MTW (mold to width and bricklaid)

Standard belt width (nominal)		Number of sprockets per shaft	Number of wearstrips	
mm	inch	min. number	Carryway (top)	Returnway (bottom)
206	8.11	2	2	2
256	10.08	2	3	2
306*	12.05	3	3	2
406	16	3	3	3
506	19.9	5	4	3
606	23.85	5	4	3

* The belt width 306 mm (12.05") is a non-cut standard mold to width belt. All other belt widths are cut sizes.

Number of sprockets and wearstrips for M2585, M2586

Standard belt width (nominal)		Number of sprockets per shaft	Number of wearstrips	
mm	inch	min. number	Carryway (top)	Returnway (bottom)
305	12	2	2	2
508	20	3	3	2
711	28	5	4	2
914	36	7	6	3
1117	44	7	8	3
1319	52	9	10	4
1522	60	11	10	4
1725	68	13	12	7
1928	76	13	12	7
2131	84	15	13	8
2333	92	17	16	8
2536	100	19	18	9

The number of sprockets depends on the belt load and may be different for driving and idling shafts.
For calculation of correct sprocket number please use LINK-SeleCalc.

声明

产品应用声明(适用于所有哈伯斯特 Habasit 产品及所有产品数据表上提到的)

“这个声明是由哈伯斯特 Habasit 及代表其附属公司、董事、雇员、代理人 and 承包商(以下统称“HABASIT”)及与本文提到的产品(“产品”)关联。请仔细阅读阅读安全注意事项,任何建议的安全警告必须严格遵守!请参考此哈伯斯特 Habasit 目录内的“安全警告”,并参考相关安装和操作手册。所有关于应用、产品的使用、产品的性能的指示及数据,皆是尽义务和关注性的建议,只为了推荐用途,对于它们的准确性、其完整性及在特定情况下的适用性,均不可被视为陈述、保证、或承诺。本文提供的数据只是基于实验室工作所在标准环境下使用小型测试工具运作取得,它们不一定与在工业运作中的产品表现相符合。新的知识及经验可能导致我们在短时间内为产品做出必须的修正及变更,我们保留在不做任何通知的情况下,修改及变更相关数据的权利。除非HABASIT明确地保证(此保证具独立性、排他性,并取代所有其他的、明示或暗示的保证),否则产品是如购买的实物一样。HABASIT否认所有其他保证,包括明示或暗示但不限于适用性,针对特定用途的适用性,非侵权,或从处理或使用过程中产生的保证,或贸易惯例,所有这一切,兹排除在适用法律允许的范围外。由于产品的使用情况并非在瑞士哈伯斯特及其附属公司可控制的范围内,我们无法对产品的适用性、可靠性、其工作能力、制程结果、产量、制品、潜在缺点、损害、相因而生的损害及深远的损害负任何责任。注:以上一切声明以英文版本的实际内容为准。