


HabasitLINK®

Instructions for belt IS610-R an CT610-R equipped with Habasit Saniclip


The Habasit Saniclip accessory is specifically designed for quick and easy rod installation/removal for frequent belt sanitation in demanding sanitary environments. It also allows quick maintenance operations when required.

Key features

- Edge module left 76 mm (3")
- Snap-Fit Rods, diameter 4 mm (0.156")
- Food-approved materials

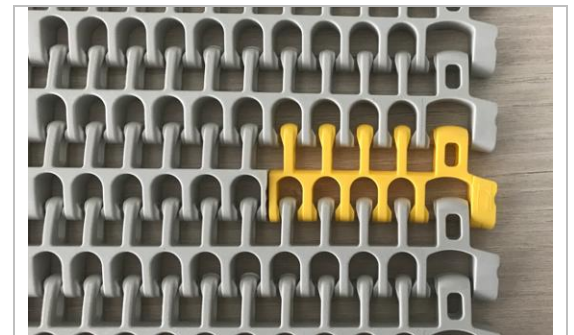

The IS610-R Habasit Saniclip can be opened by manually rotating the external leverage plug up about 80°, then extracting it with the rod. The installation works in a similar way; the rod and plug must be inserted into the belt in the 80° orientation and locked by rotating the leverage plug down until it is flush with the module surface.

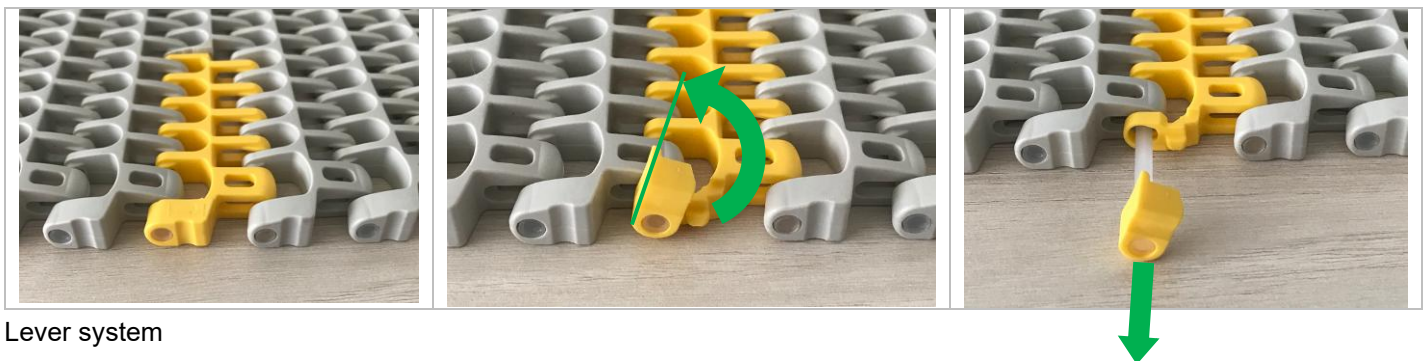

Lever system


Plug opening procedure instructions:



The bottom part of the plug is provided with a recess where the finger can be partially inserted.

Bottom side


1

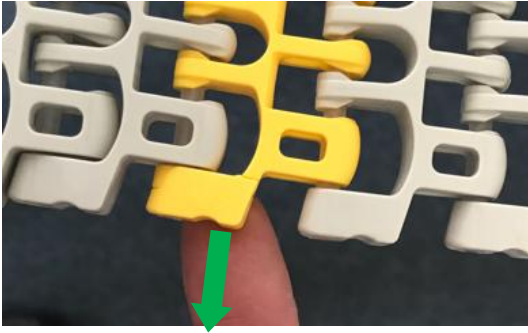

To open the Saniclip module insert a finger in the recess under the plug and pull it slightly.

Top side

2

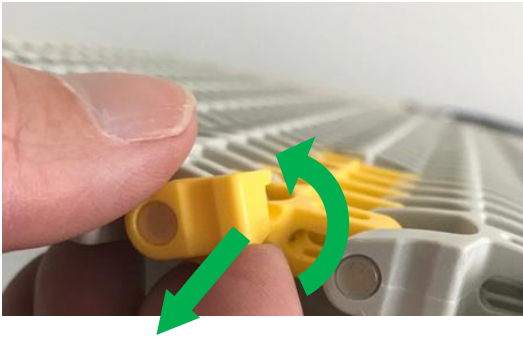

Now slightly pull the plug upwards out of the lock and meanwhile rotate it anticlockwise over the rod.

3



At approx. 80° rotation the plug is unlocked and can be extracted from the belt

Disclaimer

Product Application Disclaimer (valid for ALL Habasit products and mentioned on all PDS)

This disclaimer is made by and on behalf of Habasit and its affiliated companies, directors, employees, agents and contractors (hereinafter collectively "HABASIT") with respect to the products referred to herein (the "Products"). SAFETY WARNINGS SHOULD BE READ CAREFULLY AND ANY RECOMMENDED SAFETY PRECAUTIONS BE FOLLOWED STRICTLY! Please refer to the Safety Warnings herein, in the Habasit catalogue as well as installation and operating manuals. All indications / information as to the application, use and performance of the Products are recommendations provided with due diligence and are, but no representations or warranties of any kind are made as to their completeness, accuracy or suitability for a particular purpose. The data provided herein are based on laboratory application with small-scale test equipment, running at standard conditions, and do not necessarily match product performance in industrial use. New knowledge and experience may lead to re-assessments and modifications within a short period of time and without prior notice.

EXCEPT AS EXPLICITLY WARRANTED BY HABASIT, WHICH WARRANTIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, THE PRODUCTS ARE PROVIDED "AS IS". HABASIT DISCLAIMS ALL OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT, OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE, ALL OF WHICH ARE HEREBY EXCLUDED TO THE EXTENT ALLOWED BY APPLICABLE LAW. BECAUSE CONDITIONS OF USE IN INDUSTRIAL APPLICATION ARE OUTSIDE OF HABASIT'S CONTROL, HABASIT DOES NOT ASSUME ANY LIABILITY CONCERNING THE SUITABILITY AND PROCESS ABILITY OF THE PRODUCTS, INCLUDING INDICATIONS ON PROCESS RESULTS AND OUTPUT.