

HabasitLINK®

Sprocket series M1200



M	M = Modular belts										
	Belt pitch										
	S = sprocket one-piece; Z = split sprocket										
	Number of teeth										
	Shaft size										
	Shaft type: Q = square shaft; R = round shaft										
	Material: 6 = POM; 8 = PA										
M	12	S	12	40	Q	6					

Sprocket availability

Type	Number of teeth	Diam. of pitch Ø d _p		A ₁		Hub width B _L		Square bore Q		Ø Round bore R		Standard material
		mm	inch	mm	inch	mm	inch	mm	inch	mm	inch	-
S	10	41.2	1.6	16.8	0.66	30	1.18			20	3/4	POM
S	15	62.4	2.5	27.6	1.09	30	1.18	25	1	25	1	POM
S	19	78.8	3.1	35.9	1.41	25	0.98		1.5		1	POM
S	24	99.2	3.9	46.4	1.83	30	1.18	25 / 40	1.5	25	1	POM
S	28	116.5	4.6	55.2	2.17	30	1.18	40	1.5	25		POM
S	36	149.8	5.9	72.2	2.84	30	1.18	40 / 60	1.5 / 2.5			POM
Z	24	99.2	3.9	46.4	1.83	40	1.57	40				POM
Z-H	28	116.5	4.6	55.2	2.17	51	2	40	1.5		1 3/16	PA+GS
Z-H	36	149.8	5.9	72.2	2.84	51	2	40 / 60	1.5 / 2.5	50	1	PA+GS

S, Z: molded sprockets; Z-H: Multi-Hub sprockets. Other sprocket and hub sizes on request.

Key ways for round bore shape follow European standards for metric sizes and US standards for imperial sizes. For detailed dimensions see table in the Engineering Guide chapter Design Guide.

Other materials available on request.




Sprocket one-piece ("open window")




Split sprocket

Sprocket arrangement

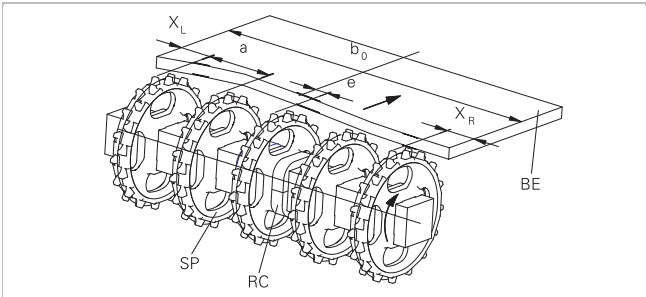

BE Belt
RC Retainer
SP Sprocket
b₀ belt width

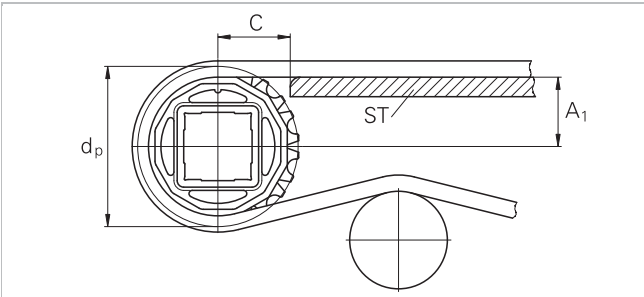

The distance **C** between the sprocket axis and the slider support **ST** is minimal 14 mm (0.55").

Wearstrips


Between driving shaft and idling sprockets or rollers the belt is carried by a slider support furnished with longitudinal wearstrips (ST) from UHMW Polyethylene or other suitable material.

Sprocket positioning

For correct positioning of the center sprocket divide the belt width by the link increment. The rounded result will be an even or an odd number. These numbers are the criteria for offset or no offset, see table.

Belt type	Sprocket spacing a		Sprocket edge distance (minimal)		Criteria for center sprocket position	Result of formula (rounded)	Offset e	Remarks
	minimal mm inch	maximal mm inch	X _L mm inch	X _R mm inch				
M1185*	50.8 2	101.6 4	50.8 2	50.8 2	n.a.	n.a.	0 0	in running direction A only
M1200	50 2	100 4	25 1	25 1	n.a.	n.a.	0 0	no offset for all belt widths

* For POM and PA belts a maximal admissible load 70% is recommended.

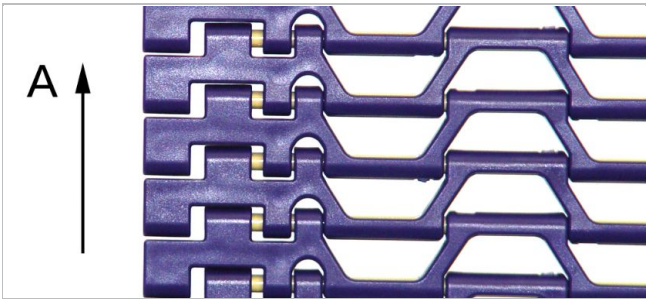

M1200 sprocket series are applicable with M1185 only in running direction (A).

Numbers of sprockets and wearstrips for series M1200

Standard belt width (nominal)		Number of sprockets per shaft	Number of wearstrips	
mm	<i>inch</i>	min. number	Carryway (top)	Returnway (bottom)
150	6	2	2	2
200	8	2	2	2
250	10	3	3	2
300	12	3	3	2
350	14	3	4	3
400	16	3	4	3
450	18	5	5	3
500	20	5	5	3
550	22	5	6	4
600	24	5	6	4
700	28	7	7	4
800	32	7	7	4
900	36	9	8	5
1000	40	9	8	5
1100	43	11	9	5
1200	47	11	9	5
1300	51	13	10	6
1400	55	13	10	6
1600	63	15	11	6
1800	71	17	12	7
2000	79	19	13	7

The number of sprockets depends on the belt load and may be different for driving and idling shafts.
For calculation of correct sprocket number please use LINK-SeleCalc.

Numbers of sprockets and wearstrips for M1185

Standard belt width (nominal)		Number of sprockets per shaft		Number of wearstrips	
mm	inch	min. number		Carryway (top)	Returnway (bottom)
203	8	2		3	2
254	10	2		3	2
305	12	2		3	2
356	14	3		4	3
406	16	3		4	3
457	18	3		4	3
508	20	5		5	3
559	22	5		5	3
610	24	5		5	3
660	26	5		6	4
711	28	7		6	4
762	30	7		6	4
813	32	7		7	4
864	34	9		7	4
914	36	9		7	4
965	38	9		8	5
1'016	40	9		8	5
1'067	42	11		8	5
1'118	44	11		9	5
1'168	46	11		9	5
1'219	48	11		9	5
1'270	50	13		10	6
1'321	52	13		10	6
1'372	54	13		10	6
1'422	56	15		11	6
1'473	58	15		11	6
1'524	60	15		11	6
1'575	62	15		12	7
1'626	64	17		12	7

The number of sprockets depends on the belt load and may be different for driving and idling shafts.
For calculation of correct sprocket number please use LINK-SeleCalc.

Numbers of sprockets and wearstrips for M1220 ActivXchange 0.5"

Standard belt width (nominal)		Number of sprockets per shaft		Number of wearstrips	
mm	inch	Drive shaft (loaded shaft)	Idling shaft (unloaded shaft)	Carryway (top)	Returnway (bottom)
109.8	4.3	1	1	2	2

Numbers of sprockets and wearstrips for M1280 ActivXchange 0.5"

Standard belt width (nominal)		Number of sprockets per shaft		Number of wearstrips	
mm	inch	Drive shaft (loaded shaft)	Idling shaft (unloaded shaft)	Carryway (top)	Returnway (bottom)
152.2	6.0	2	1	2	2

The number of sprockets depends on the belt load and may be different for driving and idling shafts.
For calculation of correct sprocket number please use LINK-SeleCalc.

声明

产品应用声明(适用于所有哈伯斯特 Habasit 产品及所有产品资料表上提到的)

“这个声明是由哈伯斯特 Habasit 及代表其附属公司、董事、雇员、代理人和承包商(以下统称“HABASIT”)及与本文提到的产品(“产品”)关联。请应仔细阅读安全注意事项,任何建议的安全警告必须严格遵守!请参考此哈伯斯特 Habasit 目录内的“安全警告”,并参考相关安装和操作手册。所有关于应用、产品的使用、产品的性能的指示及数据,皆是尽义务和关注性的建议,只为了推荐用途,对于它们的准确性、其完整性及在特定情况下的适用性,均不可被视为陈述、保证、或承诺。本文提供的数据只是基于实验室工作所在标准环境下使用小型测试工具运作取得,它们不一定与在工业运作中的产品表现相符合。新的知识及经验可能导致我们在短时间内为产品做出必须的修正及变更,我们保留在不做任何通知的情况下,修改及变更相关资料数据的权利。除非HABASIT明确地保证(此保证具独立性、排他性,并取代所有其他的、明示或暗示的保证),否则产品是如购买的实物一样。HABASIT否认所有其他保证,包括明示或暗示但不限于适销性,针对特定用途的适用性,非侵权,或从处理或使用过程中产生的保证,或贸易惯例,所有这一切,兹排除在适用法律允许的范围外。由于产品的使用情况并非在瑞士哈伯斯特及其附属公司可控制的范围内,我们无法对产品的适用性、可靠性、其工作能力、制程结果、产量、制品、潜在缺点、损害、相因而生的损害及深远的损害负任何责任。注:以上一切声明以英文版本的实际内容为准。