# HabasitLINK® Sprocket series M6400



```
M = Modular belts

Belt pitch

S = sprocket one-piece; Z = split sprocket

Number of teeth

Shaft size

Shaft type: Q = square shaft; R = round shaft

Material: 6 = POM; 8 = PA
```

## Sprocket availability

Туре	Number of teeth	Diam. of pitch Ø d <sub>p</sub>		$A_1$		Hub width B <sub>L</sub>		Square bore Q		Ø Round bore R		Standard material
		mm	inch	mm	inch	mm	inch	mm	inch	mm	inch	-
S-C1	10	206.4	8.1	94.6	3.72	27	1.06	40 / 60 /	1.5 / 2.5 /	30 / 40 /	1/1.5/	PA
								90	3.5	60	2.5	
S-C1	13	266.4	10.5	125.8	4.95	27	1.06	40 / 60 /	1.5 / 2.5 /	30 / 40 /	1/1.5/	PA
								90	3.5	60	2.5	
S-C1	15	306.7	12.1	146.7	5.78	27	1.06	120 / 40	1.5 / 2.5 /	30 / 40 /	1/1.5/	PA
								/60/90	3.5 / 4.5	60 / 90	2.5	
S-C1	20	407.6	16.1	199.2	7.84	27	1.06	120 / 40	1.5 / 2.5 /	30 / 40 /	1/1.5/	PA
								/60/90	3.5 / 4.5	60 / 90	2.5	

S-C1: machined sprockets. Other sprocket and hub sizes on request.

**Key ways** for round bore shape follow European standards for metric sizes and US standards for imperial sizes. For detailed dimensions see table in the Engineering Guide chapter Design Guide.

Other materials available on request.









Sprocket one-piece double-row (solid)

# HabasitLINK® Sprocket series M6400



### Sprocket arrangement

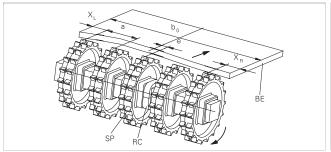

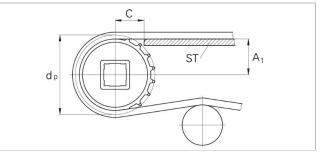

The distance  $\bf C$  between the sprocket axis and the slider support  $\bf ST$  is minimal 66 mm (2.6").

BE Belt RC Retainer SP Sprocket b<sub>0</sub> belt width

## Wearstrips

Between driving shaft and idling sprockets or rollers the belt is carried by a slider support furnished with longitudinal wear strips from UHMW Polyethylene or other suitable material.

### Sprocket positioning

For correct positioning of the center sprocket divide the belt width by the link increment. The rounded result will be an even or an odd number. These numbers are the criteria for offset or no offset, see table.

Belt type	Sprocket spacing a		Sprocket edge distance (minimal)		Criteria for center sprocket position	Result of formula (rounded)	Offset e	Remarks	
	minimal	maximal	$\mathbf{X}_{L}$	X <sub>R</sub>				Offset to which side	
	mm	mm	mm	mm	mm		mm		
	inch	inch	inch	inch	inch		inch		
M6420	50	150	25	25	b <sub>o</sub> / 50	even number (2, 4, 6	25	right or left side	
	2	6	1	1	b <sub>o</sub> / 1.97	)	1	_	
			(50)*	(50)*		odd number (3, 5, 7	0	no offset	
			(2)*	(2)*		)	0		

<sup>\*</sup>Sprocket one-piece double-row

## HabasitLINK® Sprocket series M6400



### Numbers of sprockets and wearstrips

Standard belt width (no	ominal)	Number of sprockets per shaft	Number of we	Number of wearstrips		
mm	inch	min. number	Carryway (top)	Returnway (bottom)		
100	4	1	2	2		
200	8	2	2	2		
300	12	2	3	3		
400	16	3	3	3		
500	20	3	4	3		
600	24	3	4	3		
700	28	5	5	4		
800	32	5	5	4		
900	36	5	6	5		
1'000	40	7	6	5		
1'100	43	7	7	5		
1'200	47	7	7	5		
1'300	51	9	8	6		
1'400	55	9	8	6		
1'500	59	9	9	7		
1'600	63	11	9	7		
1'700	67	11	10	7		
1'800	71	11	10	7		
1'900	75	13	11	8		
2'000	79	13	11	8		
2'100	83	13	12	9		
2'200	87	15	12	9		
2'300	91	15	13	10		
2'400	94	15	13	10		
2'500	98	17	14	10		
2'600	102	17	14	10		
2'700	106	17	15	11		
2'800	110	19	15	11		
2'900	114	19	16	12		
3'000	118	19	16	12		

The number of sprockets depends on the belt load and may be different for driving and idling shafts. For calculation of correct sprocket number please use LINK-SeleCalc.

#### Disclaimer

Product Application Disclaimer (valid for ALL Habasit products and mentioned on all PDS)

This disclaimer is made by and on behalf of Habasit and its affiliated companies, directors, employees, agents and contractors (hereinafter collectively "HABASIT") with respect to the products referred to herein (the "Products"). SAFETY WARNINGS SHOULD BE READ CAREFULLY AND ANY RECOMMENDED SAFETY PRECAUTIONS BE FOLLOWED STRICTLY! Please refer to the Safety Warnings herein, in the Habasit catalogue as well as installation and operating manuals. All indications / information as to the application, use and performance of the Products are recommendations provided with due diligence and care, but no representations or warranties of any kind are made as to their completeness, accuracy or suitability for a particular purpose. The data provided herein are based on laboratory application with small-scale test equipment, running at standard conditions, and do not necessarily match product performance in industrial use. New knowledge and experience may lead to re-assessments and modifications within a short period of time and without prior notice.

EXCEPT AS EXPLICITLY WARRANTED BY HABASIT, WHICH WARRANTIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, THE PRODUCTS ARE PROVIDED "AS IS". HABASIT DISCLAIMS ALL OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT, OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE, ALL OF WHICH ARE HEREBY EXCLUDED TO THE EXTENT ALLOWED BY APPLICABLE LAW, BECAUSE CONDITIONS OF USE IN INDUSTRIAL APPLICATION ARE OUTSIDE OF HABASIT'S CONTROL, HABASIT DOES NOT ASSUME ANY LIABILITY CONCERNING THE SUITABILITY AND PROCESS ABILITY OF THE PRODUCTS, INCLUDING INDICATIONS ON PROCESS RESULTS AND OUTPUT.